




Skjøtemuffe B49

Skjøtemuffe benyttes for å skjøte skinner sammen ved først å stramme toppskruene og deretter justere med sideskruene.

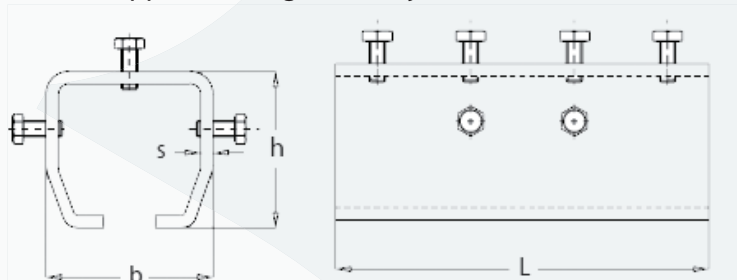


Skjøtemuffe B49

Art. nr.	Type	Mål i mm			
		L	b	h	s
	21.B49	100	38	36	3
60023001	23.B49	120	45	49	4
60024001	24.B49	150	54	60	5
60025001	25.B49	180	75	80	6
60026001	26.B49	200	93	100	8
60027001	27.B49	250	134	118	10

Sveisemuffe B00

Sveisemuffe benyttes der standard skjøtemuffe ikke er egnet.

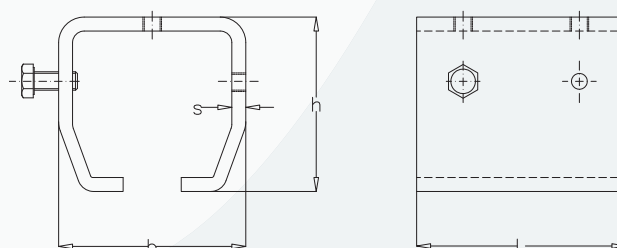

Sveisemuffe B00

Art. nr.	Type	Mål i mm			
		L	b	h	s
	21.B00	40	38	36	3
60023002	23.B00	55	48	45	4
60024002	24.B00	68	80	54	5
60025002	25.B00	90	80	75	6
60026002	26.B00	110	100	93	8
60027002	27.B00	120	114	193	10

